
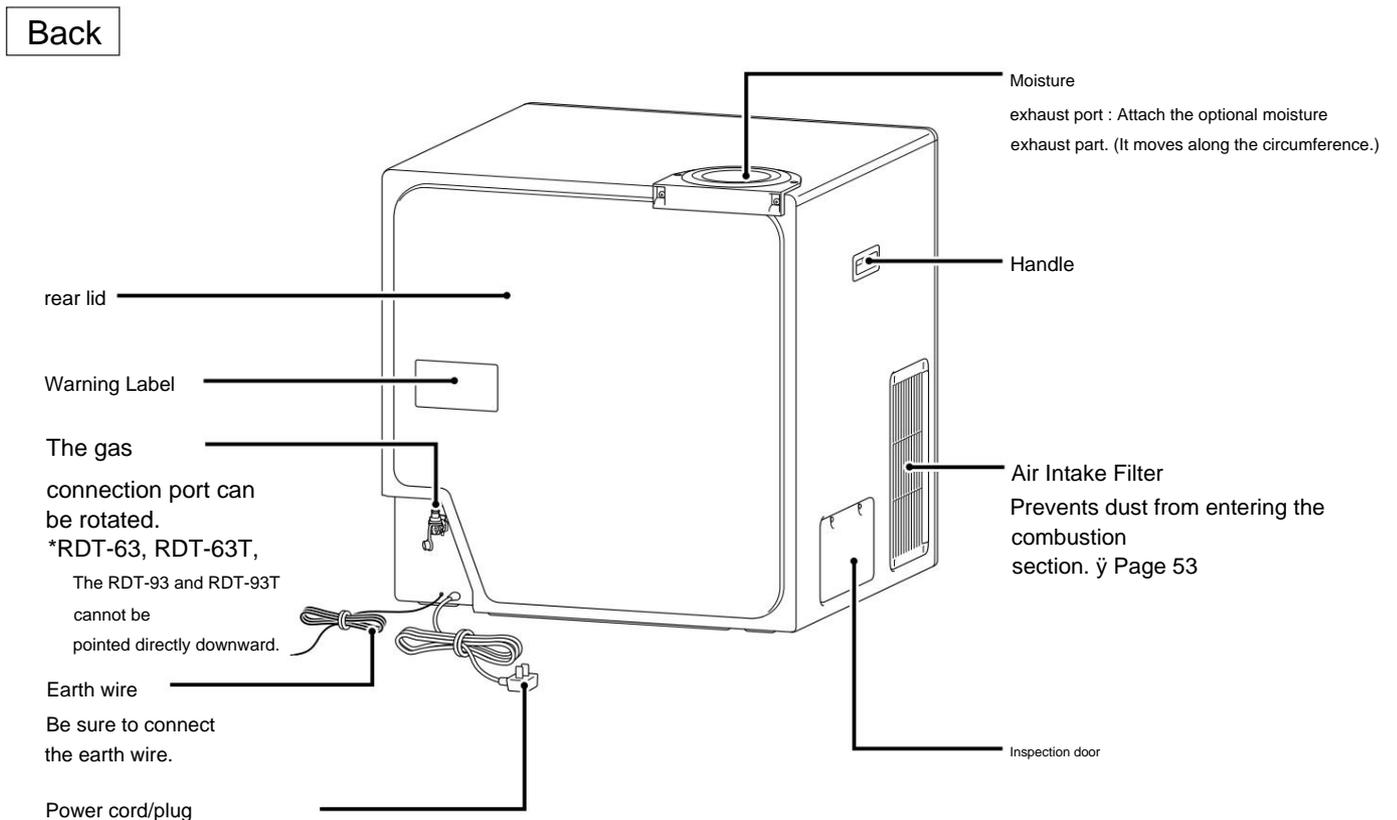


Names and functions of each part


The illustration shows a door that opens to the left. If the door opens to the right, the door handle will be reversed.

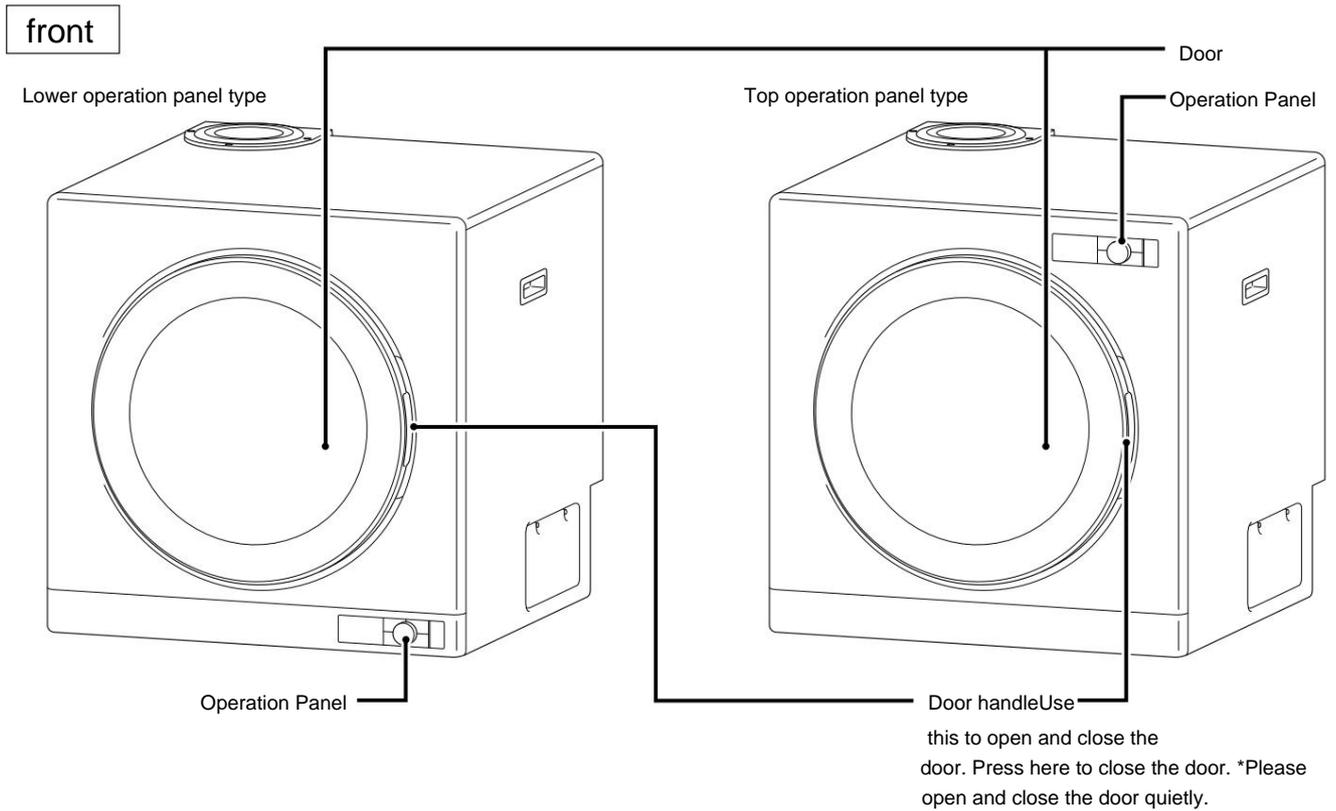

The illustration shows a left-opening door with a lower operation panel.

If the door is a right-opening type, the left and right doors will be reversed.

front

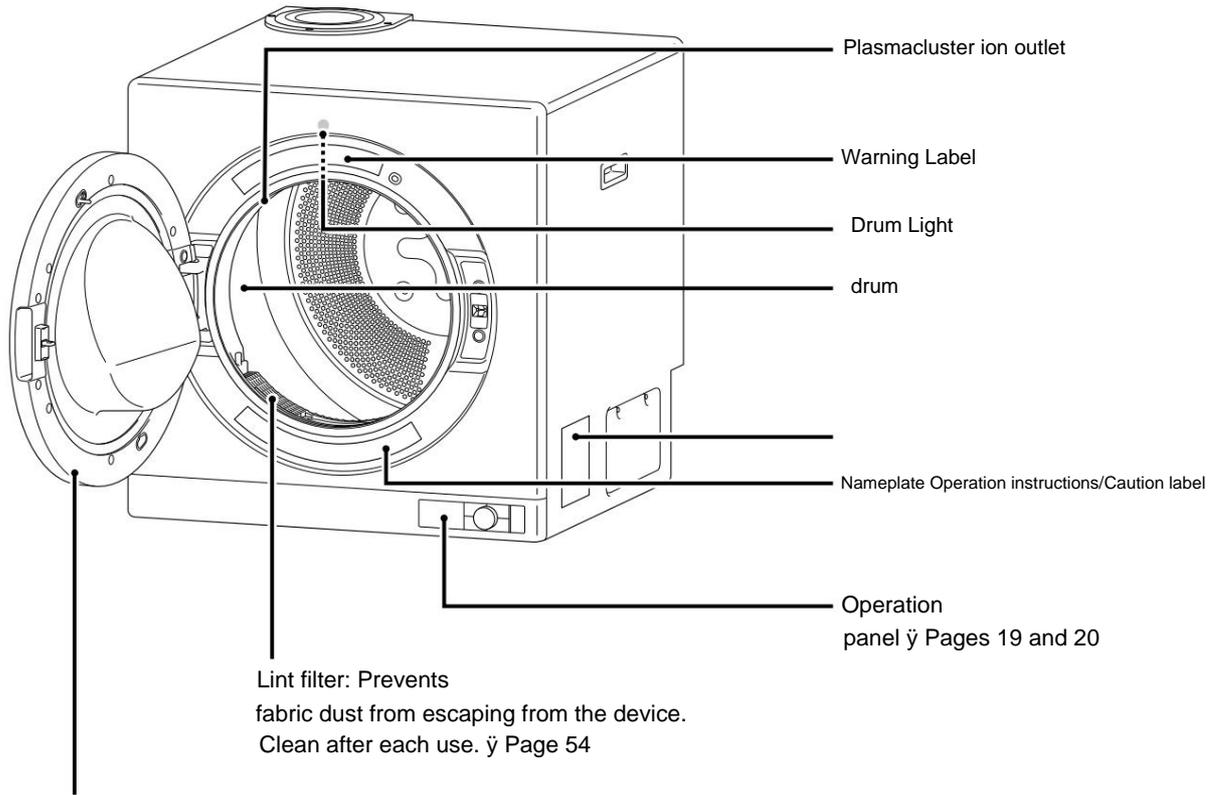

The door can be installed to open either to the left or right. (If you wish to change the orientation, please contact the store where you purchased the product or our customer service center. (A fee will be charged.)

accessories



operating instructions



Installation Instructions



Thread conversion fittings
(For R3/8 to R1/2 screw connection conversion) *RDT-63U, RDT-63TU, RDT-93U, RDT-93TU only
*Although it is marked "TU", Rc connection is also possible.




screws
M5x12mm (for fixing the device body)



washers (for the device body)

Operation panel functions

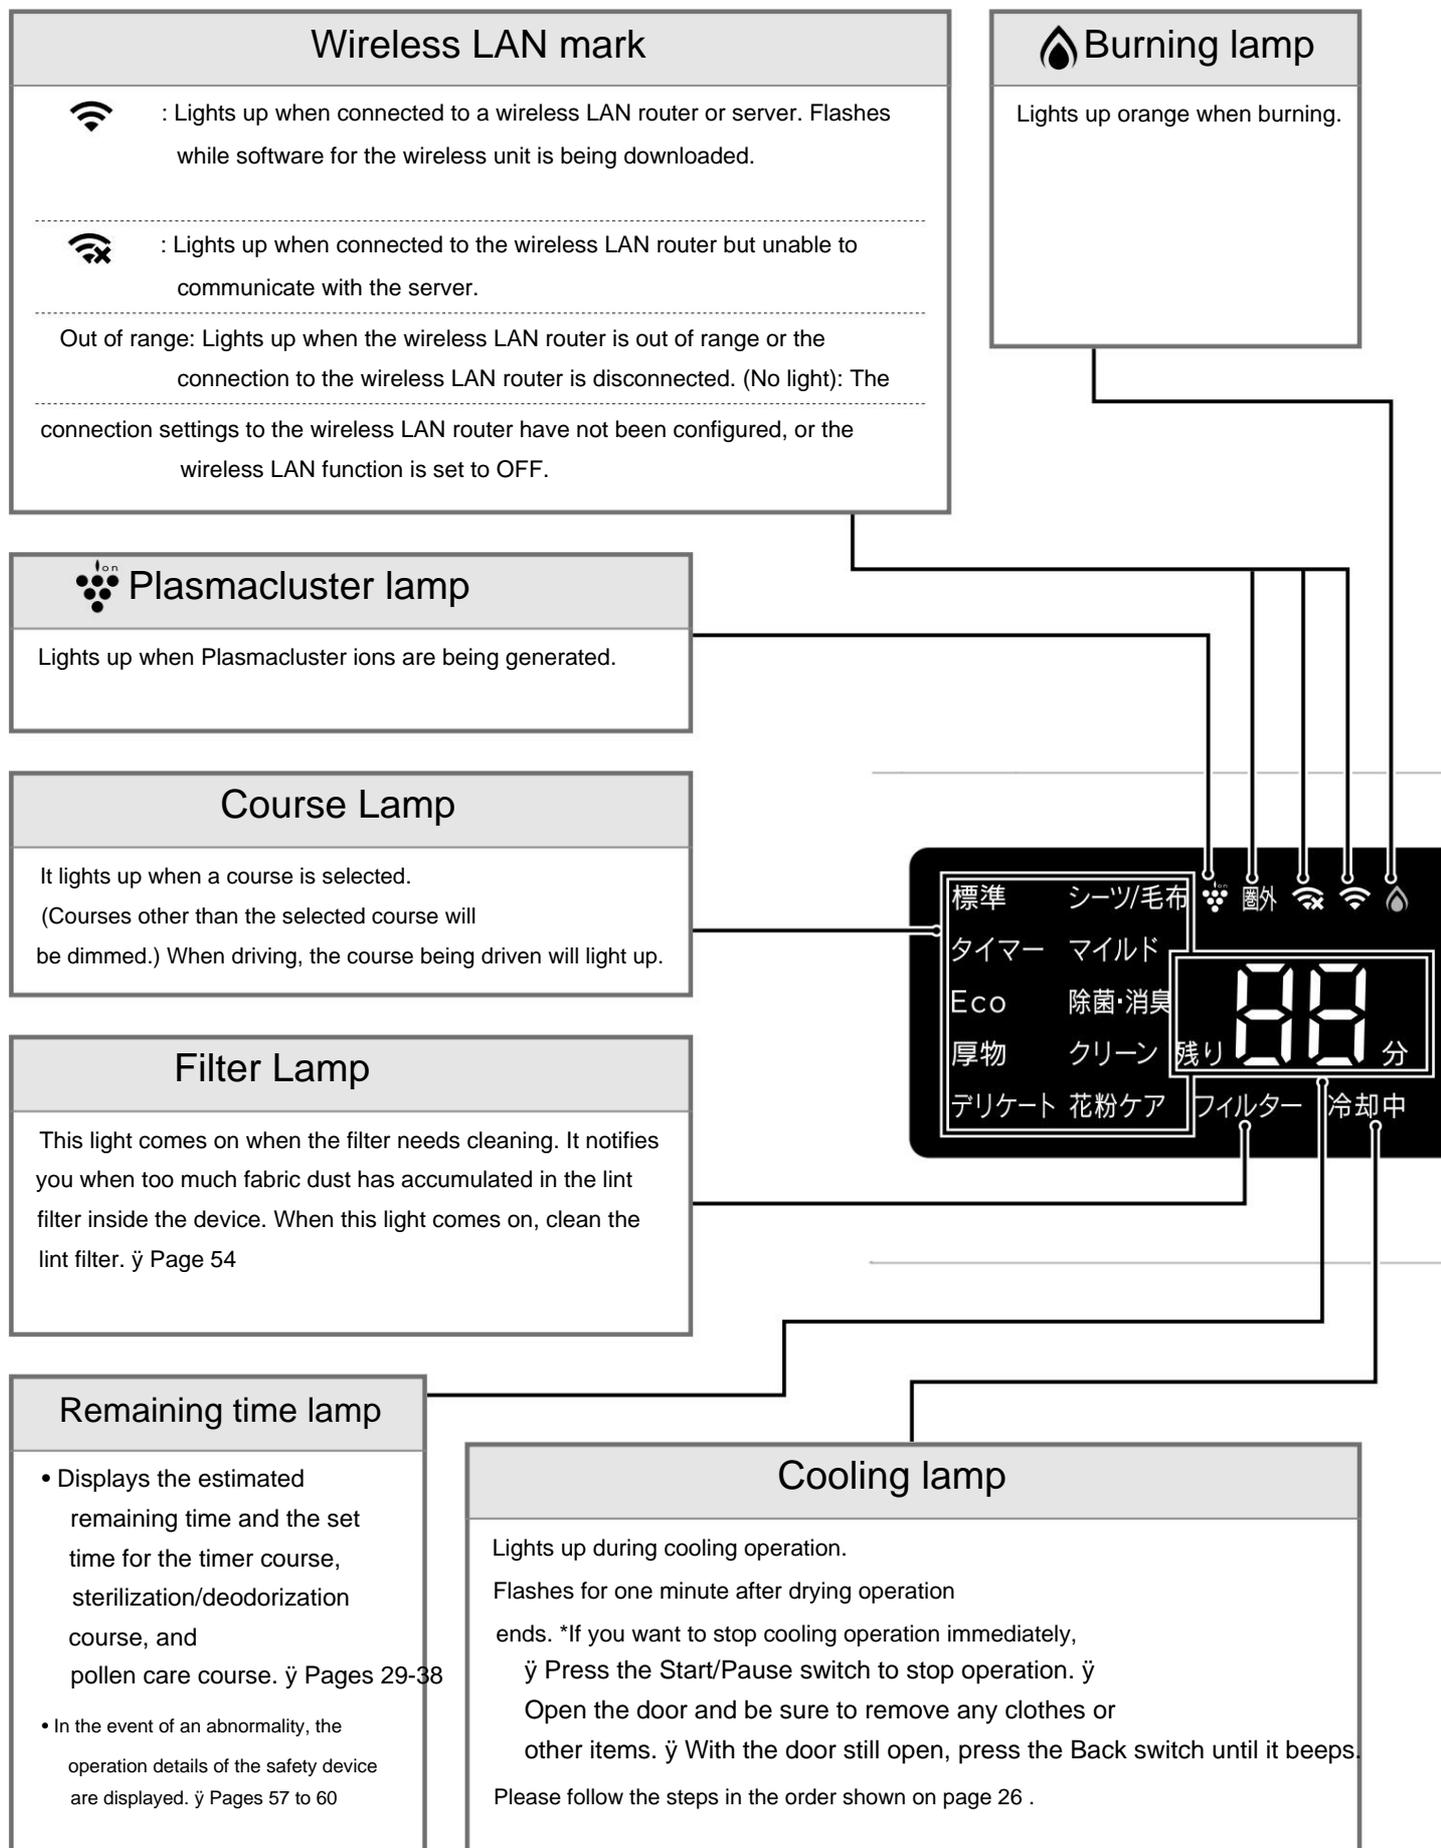

Press the switch to turn the power on.

 **Course Switch**
Press to select a course.

OK Switch
Press this to confirm the course, timer time, or setting changes.

Start/Pause switch
Press this button to start or pause operation.

Back switch


- Press this to undo any changes you have made to the settings.
- Press this to turn the power off.

* When turning off the power, press the Back switch with the door open. This will also stop the cooling operation, so be sure to remove any clothes.

 **Setting Switches**
Press this to change the settings. 
Pages
39-42 , 49-51

Dial

- Turn to select a course or set the timer.
- Turn to change settings.

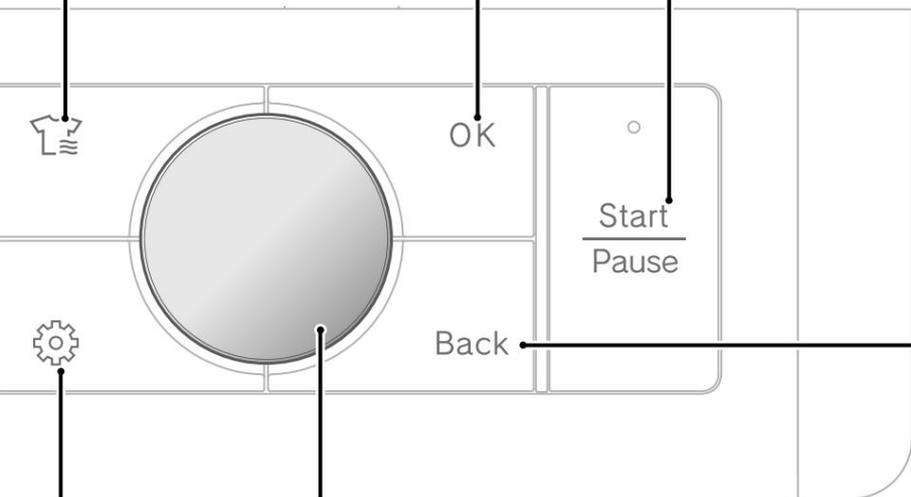

How to choose a course

What do you want to do and what type of clothes do you wear?

course

Ordinary clothes that are washed frequently every day

I want to dry my clothes.



Underwear Towel Dress shirt

Standard Course Page 29

I want to dry my wet shoes.

I just want to let it dry a little more.

Let it dry for a set amount of time.

Shoes Course Page 31

I don't care if it takes time, but I want the gas money.

I want to keep it down and dry.



Energy Course Page 29

Drying thick clothes that are difficult to dry

I want to.



Jeans, sweatshirts, winter underwear

Heavy-duty course Page 29

Drying delicate clothes such as thin synthetic clothes

I want to.

*Items that are prone to fraying, such as stockings, are sold separately.

Please place in a delicates bag. Page 61




Delicate course Page 29

Sheets and duvet covers rolled up to dry

Hard objects, blankets (Meyer blankets), etc.

I want to dry things that are difficult to dry.

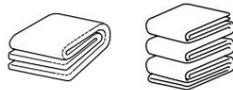

Sheets/Blanket Course Page 29

I want to dry the clothes by reducing the rotation of the drum.

Low spin Course Page 29

I want to deodorize clothes that have cigarette smells or other odors.

I want to disinfect the inside of the drum.

Disinfection and deodorization course Page 33

I want to deodorize heat-sensitive clothing and leather products.

Leather Care Course Page 35

I want to remove pollen that has stuck to my coat, etc.

Pollen Care Course Page 37

Estimated drying amount and drying time

For 6kg drying capacity type

Type of clothing	Weight (size) of one piece	Amount that can be dried at one time	Drying time
Dress shirt (blend)	Approximately 200g	Approximately 30 sheets	Approximately 60 minutes
Workwear top and bottom	About 800g	About 7 pairs	Approximately 60 minutes
(blend) Pajama top and bottom (blend)	About 500g	About 12 pairs	Approximately 65 minutes
Towel (cotton)	About 80g	About 45 sheets	Approximately 60 minutes
Meyer blanket (100% acrylic)	Single Size	1 sheet	Approximately 50 minutes
Sheets (100% cotton)	Quilt single size 150 x 210 cm	4 sheets	Approximately 60 minutes

For 9kg drying capacity type

Type of clothing	Weight (size) of one piece	Amount that can be dried at one time	Drying time
Dress shirt (blend)	Approximately 200g	Approximately 45 sheets	Approximately 90 minutes
Workwear top and bottom	Approximately 800g	About 11 pairs	Approximately 85 minutes
(blend) Pajama top and bottom (blend)	Approx. 500g	Approximately 18 pairs	Approximately 95 minutes
Towels (cotton)	Approx. 80g	approximately 62 pieces	Approximately 80 minutes
Meyer blankets (100% acrylic) Sheets (100% cotton)	Single Size	2 sheets	Approximately 80 minutes
	Quilt single size 150 x 210 cm	6 sheets	Approximately 95 minutes

*The above table is a guideline for drying clothes that have been spin-dried for 5 minutes in a fully automatic washing machine at a room temperature of 20°C.

*Towels swell up to about 1.5 times the volume of regular clothes when dried, so the amount that can be dried at one time is smaller than that of other clothes.

The drying time is set to be light. Also, if you put too much regular clothes in the machine or push them in too tightly, the drying time will be longer.

This can result in uneven drying.

*Drying times may be longer than those shown in the table above depending on the type and thickness of the fabric.

*Dry weight is the mass when dry.

notice

•Drying time will be longer in the following cases.

When dehydration is insufficient

• When the surrounding temperature is low

When **the** lint filter is clogged with fabric dust

When the ventilation in the room is insufficient

Estimated operating time for courses other than drying

•Sterilization and deodorization course

Sterilization: 20 minutes (standard dry capacity)

Deodorization: 30 minutes (1 suit)

(For details on what can and cannot be disinfected and deodorized, please see page 34.)

•Clean Course

8 hours (1 suit)

The Clean Course is a fixed course of 8 hours. The deodorizing effect may vary from person to person.

•Pollen Care Course

20 minutes (1 suit)

The effect will be less if you have a lot of clothes.

Basic usage

Preparation


• Before use, ventilate the room. If the unit is installed behind a door, be sure to open the door. • Page 8




• Insert the power plug into the outlet.



3. Check that the intake filter and lint filter are installed properly, then close the door.

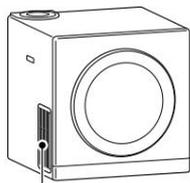

Intake filter

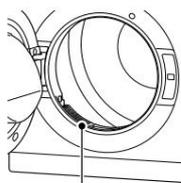

Lint filter

• Connect to the gas valve.



please


• If there is a transparent protective sticker on the surface of the operation panel, remove it before use.

Open the door and put in your clothes

• When you open the door, the power will be turned on. First, the route you drove last time will be displayed.

*You can also turn on the power by pressing any switch (other than the setting switch).

• Sort your clothes according to the selected cycle and place them in the clothes dryer. For information on how to sort your clothes, please refer to the pages for each cycle below. • Pages 29 to 38

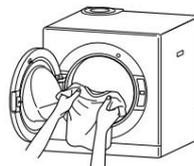

please

• Check to see if there are any clothes that cannot be dried. • Page 25

notice

- There are precautions to take regarding how to fold sheets and blankets. • Page 26
- When you open the door, the **drum** light comes on. You can also turn the drum light off by changing the settings. • Page 41
- When the static electricity reduction function is ON and you open the door, Plasmacluster ions will be emitted from the Plasmacluster ion outlet.
 - When you turn on the power, may flash alternately left and right to communicate with the wireless unit.

Choose a course

• To change the course, press the


course switch



Turn the dial and drive

Please select the course you would like to take.

If you turn the dial to the right

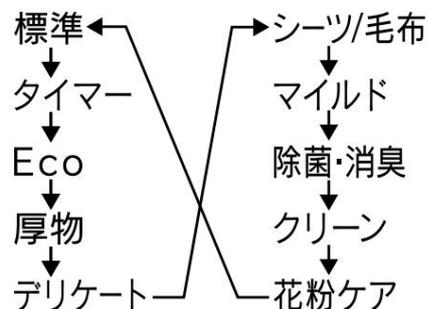

The course will change as shown in the figure. (Turning the dial to the left will change the course in the opposite direction.)

• Press the OK switch to confirm the course.

Set driving time (some courses only)

Timer course
Sterilization and
deodorization course Pollen care course



Turn the dial and

Set the operating time.

notice

- If you want to reselect the driving course



Press the course switch.

Standard Course
Eco course
Heavy
course Delicate
course Sheets/blankets
course Mild
course Clean course

No need to set the operating time. The operating time is automatically calculated and the machine operates. *The clean course is fixed at 8 hours and the drum rotates.

vinegar.

notice


- If you want to reselect the driving course



Press the course switch.

Drive

Press the Start/Pause switch to begin operation.

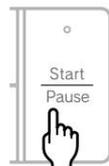


notice

- Plasmacluster ions are used in the Disinfection/Deodorization, Clean and Pollen Care courses. • No combustion occurs in the Clean course and the drum does not rotate. • No combustion occurs in the Pollen Care course and the drum rotates. • When Plasmacluster ions are being generated, lights up.
- To turn off the power before starting operation, press the Back switch to turn off the power. • If you open the door while the unit is operating, the combustion lamp will go out and the unit will stop. For more information, please see "Notice" on page 30 .

Open the door and take out your clothes

When the operation is finished, a melody will sound. *You can select melody or buzzer by changing the settings.
Page 41 Check that the combustion lamp is off and the cooling lamp is flashing or lit before opening the door.

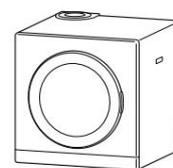

"yūyū"

Then remove the clothes etc.



To turn off the power, press the Back switch with the door open. The cooling operation will also stop, so be sure to remove your clothes.
Page 26 If the power is left on, it will automatically turn off in about 10 minutes. (Auto-off)







please

When loading or unloading clothes, make sure the lint filter is installed.

What you need to know

Items that should not be dried

Some clothes may cause fires, damage the clothes themselves, or damage the appliance. Please check the table below and the following URL to make sure you do not put them in the clothes dryer. <https://www.rinnai.co.jp/contact/> Select "Frequently Asked Questions" Select "Gas clothes dryer" (Please see "Q Gas clothes dryer | What cannot be dried?")

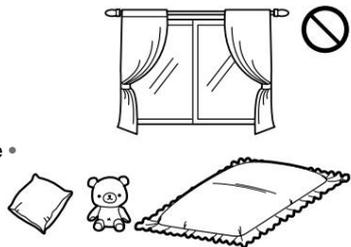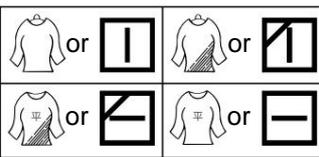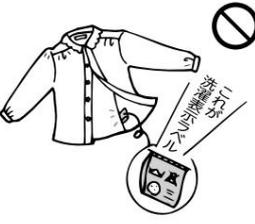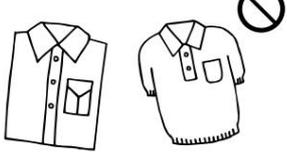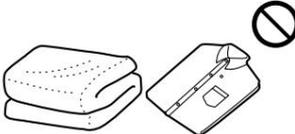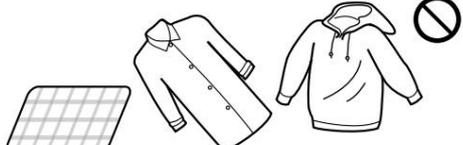
Items that may cause fire	
<ul style="list-style-type: none"> • Clothing with oil or chemicals on it (including rags and towels) • Clothing that contains polypropylene fibers • Clothing with resin (cellulose-based) <p>Page 9</p>	
Items that damage the clothing itself	
<p>This may cause silk products to discolor or lose their shape.</p> 	<p>Items marked "Do not tumble dry." "Tumble drying" refers to drying clothes in a rotating drum dryer.</p>
<p>Wool products and woolen fabrics may shrink and discolor.</p> 	<p>Heat-sensitive items</p> <ul style="list-style-type: none"> • Items that use polyurethane • Lace products (curtains, cloths, etc.) • Duvet covers with lace • Cushions, stuffed toys, etc. 
<p>This may cause leather products to lose their shape.</p> 	<p>Items with dry cleaning symbols</p> 
<p>Items marked "flat dry" or "hang dry"</p>  	<p>Clothing that may shrink</p> <ul style="list-style-type: none"> • Clothing made from linen, recycled fibers (rayon), etc. • Knitted clothing 
<p>When using an iron or other tool to heat up clothing with fused patches, the patches may come off or the adhesive may melt.</p> 	
Items that may damage the equipment	
<p>This can cause malfunctions in the same way as clogged filters caused by futons or glued clothing.</p> 	<p>Everyday items other than clothing : mats, carpets, umbrellas, wigs, fragile items, etc.</p> 
<p>Cushions and other items that contain padding or urethane (sponge) can cause the same malfunctions as clogged filters.</p> 	<p>Poorly breathable clothing etc. (Placemats, raincoats, windbreakers, waterproof sheets (picture sheets, mats, etc.), vinyl products, nursing aprons, etc.) These can cause the same malfunctions as a clogged filter.</p> 

Cooling operation


Cooling operation.

After drying is complete, the inside of the drum is hot. If oil remains on the clothes, there is a risk of spontaneous combustion, so the cooling operation starts automatically one minute after drying is complete. The cooling operation involves three minutes of continuous operation followed by intermittent drum operation for up to 40 minutes (the drum rotates for one minute approximately every four minutes). *The Clean Course and Pollen Care Course do not use gas, so the cooling operation does not take place.

To stop the cooling operation, press the Start/Pause switch, wait until the drum has completely stopped, then with the door open, press the Back switch until you hear a beep.

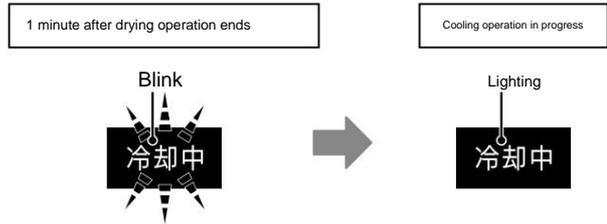

*If the temperature inside the drum is low, the process will finish quickly.

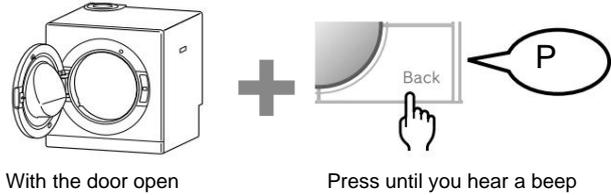


⚠️ caveat

When stopping the cooling operation, be sure to remove the clothes.

If oil remains on clothing, it may spontaneously combust.


How to fold sheets/blankets

Items that roll up and are difficult to dry, such as sheets and duvet covers

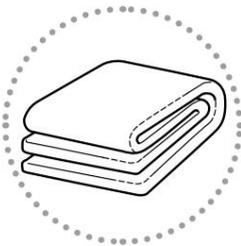

Fold the sheets and duvet covers one by one before placing them in the dryer. If they are rolled up and do not dry, repeat the process. The amount that can be dried at one time is up to 4 single size sheets for the 6kg capacity type and up to 2 double size sheets for the 9kg capacity type.

Blankets (Meyer blankets) and other items that are difficult to dry

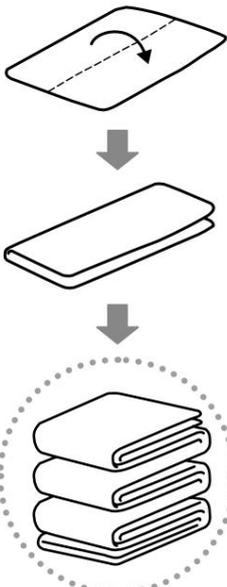

Fold the blanket in half lengthwise and then place it in the folding screen. The maximum amount that can be dried at one time is one blanket for the 6kg capacity type. The maximum amount that can be dried at one time is two blankets for the 9kg capacity type. *If the blanket is new, some of the fur may fall out and accumulate in the lint filter, but this is just unwanted fur from the blanket, so there is no need to worry. *If the blanket is not completely dry due to insufficient dehydration, turn it over and dry it again.

Dryable blanket

- Single size items weighing 3.0 kg or less that are made from 100% synthetic fibers and have the following symbols:
- Meyer blankets
 - Tufted blankets
 - Woven blankets

*Drying on a cycle other than the sheet/blanket cycle will damage the blanket.

Do not dry out.



- Items with a pile length of 10mm or more (long pile) (there is a risk of the fabric becoming floppy)
- Electric blankets
- 100% wool blankets
- Items marked "Do not tumble dry"

What you need to know

How to dry properly (tips for drying)

To ensure proper drying, please pay attention to the following:


Do not put in too many clothes

• Overloading the machine may cause the drum to stall when starting or during operation.

To reduce uneven drying and wrinkles, loosen each

piece of clothing and smooth out any wrinkles before placing it in the machine.

• Standard drying capacity for the amount of clothing • As a guideline, use less laundry (70-80%) than what you put in the drum after spin-drying.

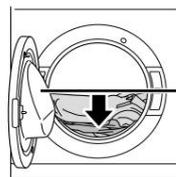

Below the drum center

• If you have only a small amount of clothes to dry, place them next to a dry bath towel to prevent uneven drying.

• If you have a mixture of thick and thin clothes, select the thick cycle.

Clothing with zippers or hooks

• Close any fasteners or hooks and turn the clothes inside out when drying. This will prevent damage to the fabric and the inside of the drum.



Clothes that produce a lot of lint

• Separate and dry new towels and other items that tend to produce lint separately. Lint will stick to clothing that contains synthetic fibers.



Reduce static electricity

• Use fabric softener when washing. • Use anti-static function. •

Page 28



Display of remaining time (course operation)

• The remaining time is displayed according to the volume and moisture of the clothes.

• This is only an estimate, so it may differ from the actual end time. Also, when the filter lamp is on, the remaining time may not be displayed correctly.



• The remaining time is displayed in 5-minute increments, and when there is 1 minute remaining, is displayed.


• In order to adjust the estimated time until the end of the operation and the actual end time, if the same time is displayed for more than 5 minutes,

The remaining time may be extended or shortened depending on the adjustment. Also, the following message will be displayed during adjustment.



About static electricity reduction function

When you open the door, Plasmacluster ions are blown out from the Plasmacluster ion outlet. If you hold the air containing Plasmacluster ions against your hands, you can reduce static electricity when taking out clothes. The default setting is OFF. To turn it ON, see page 42 .

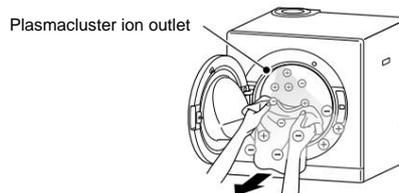

Note
 Do not insert your fingers or objects into the Plasmacluster ion outlet. This may result in injury or equipment failure.



notice

- Static electricity reduction effects vary from person to person.
- There is no need to replace the Plasmacluster ion generator.

A small amount of ozone is generated when Plasmacluster ions are generated, so there may be an odor from the outlet, but this is due to the natural environment, such as forests .

The level is the same as that found in the environment and does not pose any health problems.

About audio mode and volume settings

- You can switch the audio mode.

Friendly mode: Provides more guidance than "Standard". Standard

mode: Provides notification of safety device activation and guides for changing settings. To change settings, see page 40. • You can change

the volume. (Large, normal, small, off)


Even when the volume is set to "off," the buzzer will sound in the following

cases: - When the filter lamp is flashing (at the end of operation) - When the safety device is activated -

To change the door closing prevention setting, see page 40.

About the small item drying shelf (sold separately)

- You can dry shoes and other items by using the small item drying rack (sold separately) on the timer course . See Page 32

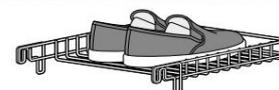

Use when you are concerned about deformation during the sterilization/deodorization course or clean course .

Please refer to page 34.



Note
 Do not place objects weighing more than 3kg on the small item drying rack. Do not dry shoes without using the small item drying rack. This may cause equipment failure.



When using the small item drying rack, make sure that the clothes do not hang over



the edge. Fold the clothes before placing them. Do not stack them too high (up to 20cm high). Do not place items that may fall.

Please be careful as the small item drying rack will be very hot immediately after use.


Standard/Eco/Thick/Delicate

How to use


1 Put your clothes in and close the door



Open the door.

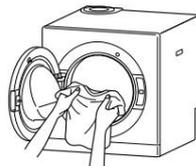

Place thoroughly dehydrated clothes into the machine one piece at a time, loosening them as you go.

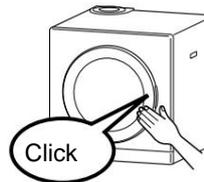

Close the door.

When you open the door, the power comes on.

notice

- From the second time onwards, the course you previously selected will be displayed.

2 Press the course switch to select the driving course.



標準	シーツ/毛布
タイマー	マイルド
Eco	除菌・消臭
厚物	クリーン
デリケート	花粉ケア




Turn the dial to select the driving course and press the OK switch

- If you want to reselect the course, press the course switch.

notice


- Turning the dial will change the operating course as follows.

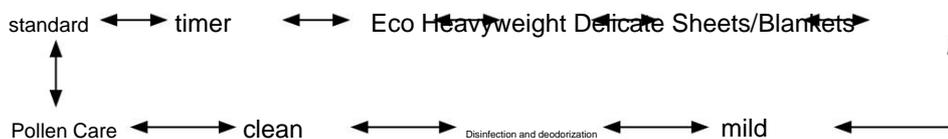

- You can change the course even while the machine is running (except for the clean course). If you change the course while the machine is running, press the OK switch after selecting the course. When you press the button, the unit will run for up to 2 minutes in cooling mode, after which it will start operating in the selected mode.

• Sheets/blankets • Mild course

Press the Start/Pause switch

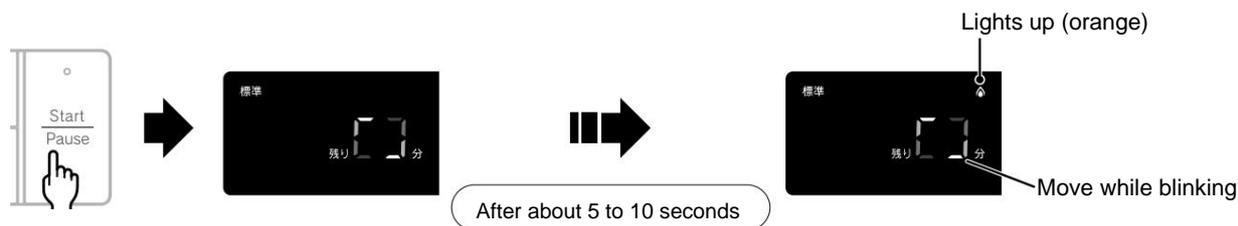


notice

- After 2 minutes, an estimate of the remaining time is displayed. • If the door is opened while the machine is running, the combustion lamp will go out and the machine will stop. Closing the door will resume operation. If the door is left open for more than 5 minutes, a buzzer will sound. "Beep, beep, beep..." (repeats)." The buzzer will stop when the door is closed, and the machine will stop automatically after the cooling operation.
- If the Start/Pause switch is pressed while the machine is running, the combustion lamp will go out and the drum will stop. If this state continues for approximately 2 minutes, the drying operation will stop and the cooling operation will begin. • If the Start/Pause switch is pressed while the drum is stopped, the combustion lamp will light up orange after a maximum of approximately 2 minutes of cooling operation, and the drying operation will Resume driving.

When the melody plays, take out your

- *Depending on the settings, a buzzer may sound . When the drying operation is finished, a melody will sound. Check that the combustion lamp is off and the cooling lamp is flashing or lit before opening the door.

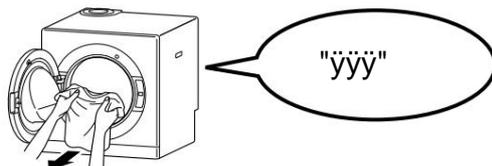

notice

- If you do not remove the clothes, the cooling operation will start after one minute. Also, even after you remove the clothes, the cooling operation will continue to lower the temperature inside the drum. The cooling operation will resume about 2 minutes after the door is closed. You can open the door and remove clothes even during the cooling operation. The operation will stop automatically when the cooling operation is completed.
- If you perform a drying operation immediately after a cooling operation, the drying operation will start after a maximum of approximately 2 minutes of cooling operation.

Remove clothes after the drum has completely stopped.

Note Immediately after washing has finished, the inside of the door, the area around the



clothes outlet, the lint filter, and metal parts of the clothes (zippers, etc.) will be very hot, so be careful.


Timer Course

How to use

1. Put your clothes in and close the door



Open the door.

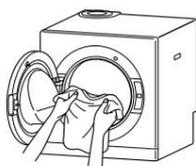

Place thoroughly dehydrated clothes into the machine one piece at a time, loosening them as you go.



Close the door.

When you open the door, the power comes on.


notice

- From the second time onwards, the course you previously selected will be displayed.

2




Press the course switch to select the timer course

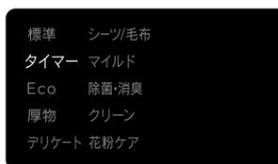

Turn the dial to select the timer course and press the OK switch

- To select a different course, press the course switch. • Turn the dial to change the operating course. For details, see "Notice" on page 29, item

3. Set the operating time

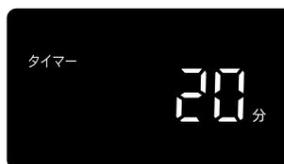


Turn the dial to set the operating time.

notice

- The operating time can be set from 5 to 90 minutes. (5 to 30 minutes can be set in 5 minute increments, and 30 to 90 minutes can be set in 10 minute increments.) • The first time you use it, it is set to 20 minutes. From the second time onwards, the time previously set will be displayed. • Even if you turn the dial after the setting has changed to or, it will not change any further.

Press the Start/Pause switch

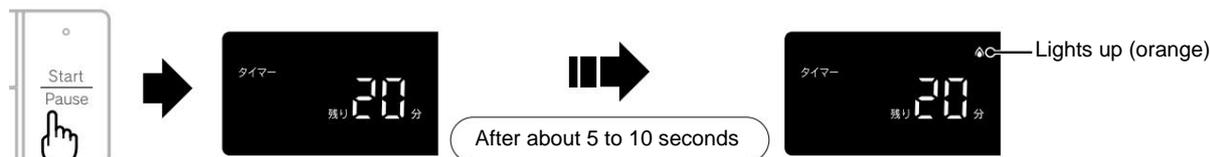


notice

- If the door is opened while the machine is running, it will stop. For details, please see "Notice" on page 30, item
- If the Start/Pause switch is pressed while the machine is running, the combustion lamp will turn off and the drum will stop. If this state continues for approximately two minutes, the drying operation will stop and the cooling operation will start. • If the Start/Pause switch is pressed while the drum is stopped, the combustion lamp will light up orange after a maximum of approximately two minutes of cooling operation, and the drying operation will Resume driving.

When the melody sounds, take out your clothes

*Depending on the settings, a buzzer may sound . When the drying operation is finished, a melody will sound. Check that the Combustion lamp is off and the Cooling lamp is flashing or lit before opening the door.

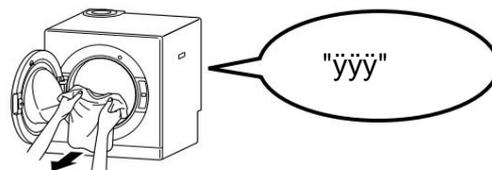

notice

If you do not remove the clothes, the cooling operation will start after one minute. Also, even after you remove the clothes, the cooling operation will continue to lower the temperature inside the drum. The cooling operation will resume approximately two minutes after the door is closed. You can open the door and remove clothes even during the cooling operation. The operation will automatically stop when the cooling operation is complete. If you perform the drying operation after the cooling operation, the drying operation will start after a maximum of approximately two minutes of cooling operation.

Note Remove clothes after the drum has completely stopped.



Immediately after washing has finished, the inside of the door, the area around the clothes outlet, the lint filter, and metal parts of the clothes (zippers, etc.) will be very hot, so be careful.

About the small item drying shelf (sold separately)

You can dry shoes and other items using the small item drying rack (sold separately). [y](#) Page 28

Items that can/cannot be dried on the small item drying rack (sold separately)

Items that can be

dried : Cloth shoes (Estimated drying time: 40 minutes)

- Please use the small item drying rack (sold separately). [y](#)


Pages 28 and 61 For

installation instructions, please refer to the instruction manual for the small item drying

rack. •After thoroughly dehydrating the shoes, place them with the

soles facing down. •For shoes with laces, remove the laces and open the openings to allow the warm

air to reach them more easily.

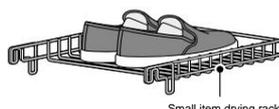

Small item drying rack



Items that cannot be dried: Bags , hats , stuffed toys , leather shoes , rain shoes , shoes with appliques or lights


Disinfection and deodorization course

How to use

1. Put your clothes in and close the door



Open the door.

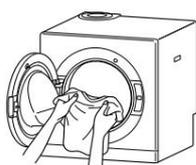

Put in dry clothes.



Close the door.

The power will turn on when you open

the door. Do not put clothes in the drum when disinfecting the inside of the drum. Set the operation time to 3 minutes to disinfect the inside of the drum.


notice

• From the second time onwards, the course you previously selected will be displayed.

2



Press the course switch and select the sterilization and deodorization course.

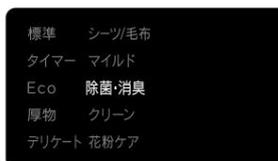

Turn the dial to select the sterilization and deodorization course and press the OK switch.

• To select a different course, press the course switch. • Turn the dial to change the operating course. For details, see "Notice" on page 29, item

3. Set the operating time



Turn the dial to set the operating time.

Setting the operating time to 3 minutes will disinfect the inside of the drum.


notice

• The operating time can be set to 3 minutes, or between 10 and 90 minutes. (10 to 30 minutes can be set in 5 minute increments, and 30 to 90 minutes can be set in 10 minute increments.) •

The first time you use it, it is set to 30 minutes. From the second time onwards, the time previously set will be displayed. • Even if you turn the dial after the setting has

changed to 3, it will not change to 30 further.

Press the Start/Pause switch

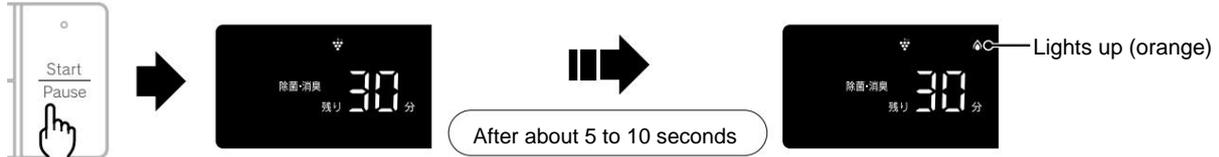


notice

- If the door is opened while the machine is running, it will stop. For details, please see "Notice" on page 30, item
- If the Start/Pause switch is pressed while the machine is running, the combustion lamp will turn off and the drum will stop. If this state continues for approximately two minutes, the drying operation will stop and the cooling operation will start.
- If the Start/Pause switch is pressed while the drum is stopped, the combustion lamp will turn orange after a maximum of approximately two minutes of cooling operation, and the drying operation will resume driving.

When the melody sounds, take out your clothes

*Depending on the settings, a buzzer may sound. When the drying operation is finished, a melody will sound. Check that the Combustion lamp is off and the Cooling lamp is flashing or lit before opening the door.

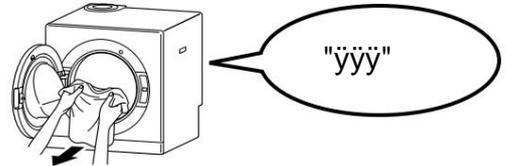

notice

- If you do not remove the clothes, the cooling operation will start after one minute. Also, even after you remove the clothes, the cooling operation will continue to lower the temperature inside the drum.
- The cooling operation will resume about 2 minutes after the door is closed. You can open the door and remove clothes even during the cooling operation. The operation will stop automatically when the cooling operation is completed.
- If you perform a drying operation immediately after a cooling operation, the drying operation will start after a maximum of approximately 2 minutes of cooling operation.

Note

Remove clothes after the drum has completely stopped.



Immediately after washing has finished, the inside of the door, the area around the clothes outlet, the lint filter, and metal parts of the clothes (zippers, etc.) will be very hot, so be careful.

Items that can be disinfected and deodorized/Items that cannot be disinfected

Sterilizing and deodorizing items

- General cloth products (towels, skirts, trousers, polo shirts, underwear, etc.)
 - Cushions, hats, stuffed animals, suits
- *If you are concerned about deformation, please use the small item drying rack (sold separately). (Page 28*61) *Only place one item on the small item drying rack to disinfect and deodorize. So lame.



Items that cannot be disinfected or deodorized

- Fur and other luxury items
- Oily-stained items
- Japanese clothing
- Pets and other living creatures
- Leather products
- Rubber and vinyl products
- Large items such as sheets and blankets
- Delicate materials (silk products, knitwear, stoles, embroidery, lace)
- Bags, slippers, toys
- Clothing that is sensitive to heat (Page 25)
- Clothing that may shrink (Page 25)

Note

Since it does not remove dirt, it cannot eliminate odors such as sweat or sebum.



Depending on the type and strength of the odor and the type of clothing, it may not be possible to completely eliminate odors. In that case, we recommend washing or dry cleaning.

Clean Course

How to use

1. Put your clothes in and close the door



Open the door.



Put in dry clothes.




Close the door.

When you open the door, the power comes on.

notice

- From the second time onwards, the course you previously selected will be displayed.

Press the course switch and select the clean course.

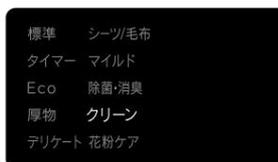


Turn the dial to select the clean course Press the OK switch

- If you want to reselect the , press the course switch.

notice

- Turn the dial to change the driving course. For details, see "Notice" on page 29, item  Courses can be changed even while driving. If you change the course while driving, press the OK switch after selecting the course to switch to the new course .
Start operation with the power on.

Press the Start/Pause switch

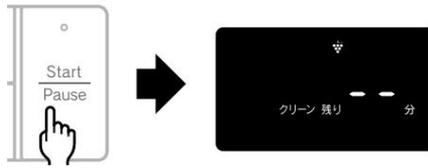

notice


• The clean course does not use gas, so the combustion lamp does not light up. Also, the drum does not rotate. • If the door is opened during operation, the operation will stop. Operation will resume when the door is closed.

If the door is left open for more than 5 minutes, a buzzer will sound. "Beep, beep, beep... (repeat)" The buzzer will stop when the door is closed, and the unit will automatically stop after the cooling operation.

When the melody plays, take out your clothes

*The buzzer may sound depending on the settings.

After 8 hours, a melody will sound. To stop operation, press the Start/Pause switch, open the door, and press the Back switch to turn off the power.

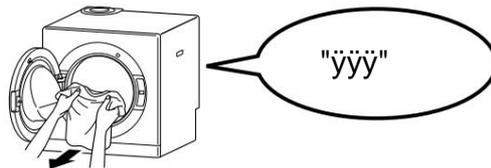

notice

• There is no cooling operation after operation has ended.

△ **Note** As it does not remove dirt, it cannot eliminate odors such as sweat or


sebum. Depending on the type and strength of the odor and the type of clothing, it may not be possible to completely eliminate odors. In that case, we recommend washing or dry cleaning.



Pollen Care Course

How to use


1. Put your clothes in and close the door

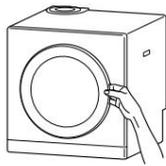

Open the door.



Put in dry clothes.

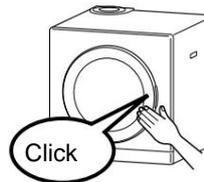


Close the door.

When you open the door, the power comes on.

notice

- From the second time onwards, the course you previously selected will be displayed.

2 Press the course switch and select the pollen care course.

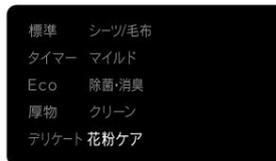

Turn the dial to select the pollen care course and press the OK switch.

- If you want to reselect the course, press the course switch.

notice

- Turn the dial to change the operation mode. For details, see "Notice" on page 29, item **1**.
- You can change modes even while the machine is running (except for the Clean mode). If you want to change modes while the machine is running, press the OK switch after selecting the mode. Press the button to start driving on the switched course.

3. Set the operating time

 


 Turn the dial to set the operating time.

notice

- The operating time can be set from 10 to 90 minutes. (10 to 30 minutes can be set in 5 minute increments, and 30 to 90 minutes can be set in 10 minute increments.) • The first time you use it, it is set to 30 minutes. From the second time onwards, the time previously set will be displayed. • Even if you turn the dial after the setting has changed to or, it will not change any further.

Press the Start/Pause switch




notice

- The pollen care course does not use gas, so the combustion lamp does not light up. • If you open the door while the unit is running, it will stop. When you close the door, it will resume operation. For details, please refer to "Notice" on page 36, item

When the melody sounds, take out your clothes

*The buzzer may sound depending on the settings.

A melody will sound when the drive is finished.

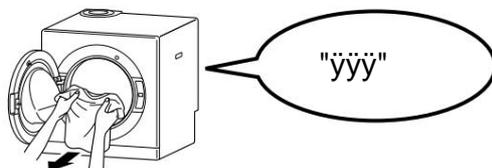

notice

- There is no cooling operation after operation has ended.

⚠ Wait until the drum has completely stopped before removing clothes.

 **Note**

