


Names of parts/Accessories How to read the operation part

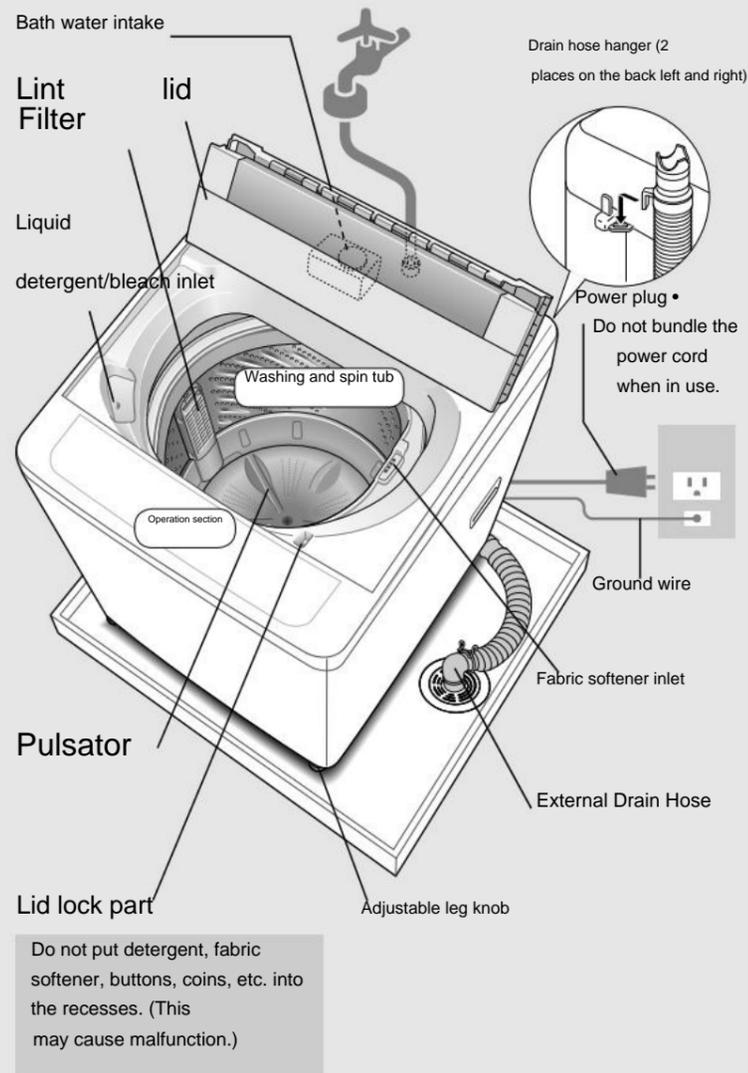

[Course (number), water volume, remaining time] display

予約 残り約分 コース 1 時間後

The selected course (number) is displayed. (Example) In the case of the Omakase course

予約 残り約分 コース 55 L

After starting, the water volume is automatically set steplessly according to the amount of laundry. (P.11) (Stepless water level)

予約 残り約分 コース 43 L

Displays an estimate of the remaining time (minutes).

If the remaining time is longer than 90 minutes, will be displayed. The remaining time will be displayed. When the remaining time is less than 90 minutes, the remaining time display may change depending on the type of laundry and installation status. Actual product may differ from image.

After turning the power off, if the display on the right is displayed, the power will not turn on immediately.

スタート一時停止 Start/Pause button

Press this to "start" or "pause" operation, or to open the lid while operation is in progress. * The "course" cannot be changed after starting.

入 Power On Button

Press this to turn the power on. After turning the power on, if the unit is left for 10 minutes without being started, the power will automatically turn off.

切 Power off button

Press this button to turn the power off.

The light turns on when the lid is locked, such as when the machine is in operation. If you stop operation with the "Pause" button, the lid will be unlocked. (The light turns off.)

(P.11) For NA-F60PB6

■ 49 L
■ 42 L
■ 37 L
■ 32 L
■ 17 L

粉末合成洗剤 無段階水位

■ 14以上 ■ 注水 ■ 12以上 ■ 55 L 予約 時間後 ■ 洗い ■ すすぎ1回 ■ すすぎ1
■ 10 ■ 2 ■ 8分 ■ 50 L 残り約分 ■ すすぎ2回 ■ すすぎ2
■ 6分 ■ 1回 ■ 40秒 ■ 37 L コース L ■ すすぎ3回 ■ すすぎ3
■ 20 L ■ 20 L

1 おまかせ 6 槽洗浄
2 わたし流 7 送風乾燥
3 すすぎ1回 8 1時間
4 毛布 9 2時間
5 手洗い 9 3時間


電源 切 入

スタート一時停止

ふたロック
チャイルドロック

コース
チャイルドロック 設定/解除(5秒押し)

Checking the accessories

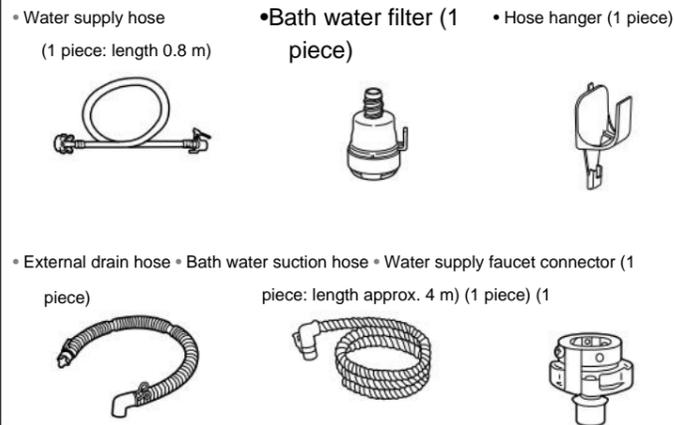

洗い Wash, rinse and spin button

You can choose the time and number of times for washing, rinsing and spin-drying.

Blinking (in progress)

14以上
10
6分 (Example) When washing

You can change the settings by pressing the "Pause" button during the "Wash" operation. To use the combination of wash, rinse and spin cycles according to your purpose (P.21)

水量 Water volume button

You can switch by pressing the water volume button during the "Wash" operation. (P.41)

(Some courses have water volumes that cannot be selected.)

Please manually select the minimum water volume of 20 L (17 L). You can check the water volume by pressing the water volume button.

予約 Reservation button

You can set the time after which the washing will end in one-hour increments up to 24 hours (page 12).

"One rinse" course 1 to 24 hours later	
"Automatic", "My style" course	2-24 hours later

• Powdered soap cannot be used when making a reservation. (P.10)

Reservations cannot be made for the "hand wash", "tub cleaning" and "air drying" courses.

• Press after starting to check your reservation time.

コース Course button

You can choose your preferred course according to the laundry.

How to choose a course (P.8)



If you press and hold this button for 5 seconds or more, you can set the "child lock" to prevent children from opening the lid without permission (P.35).

You can check the course by pressing the course button.


風呂水 Bath water button

Use this when washing clothes with bath water. (P.14)

Choose a course

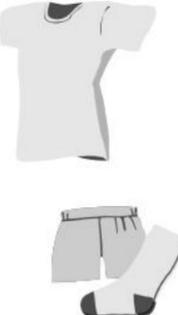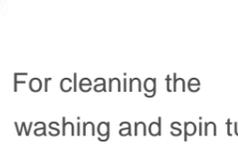At times like these		Course (number) name	Capacity limit NA-F70PB6 NA-F60PB6	
Normal clothing 	For everyday laundry...	1 Random (P.12)	7 kg	6 kg
	I want to create my own course	2 My Way (Page 20)	7 kg	6 kg
	When using liquid detergent with one rinse	3 Rinse once (P.12)	7 kg	6 kg
blanket 	Meyer blankets, etc.	4 blanket (Page 16)	3 kg	3 kg
Delicate clothing 	Gently wash your precious clothes!	5 Hand washing (p.18)	2 kg	1.6 kg
For cleaning the washing and spin tub 	Prevents black mold	6 Tank cleaning, blow drying (Page 26)		
	If black mold appears	6 Tank cleaning (Page 27)		
When you want to dry synthetic clothes (2 kg) •There are some clothes that cannot be "air dried," so be sure to check "Clothes that cannot be air dried" (p. 22) before use.		789 Air blow drying (P.22)	2 kg	2 kg

☞ Guide to checking laundry capacity (estimated weight per item)

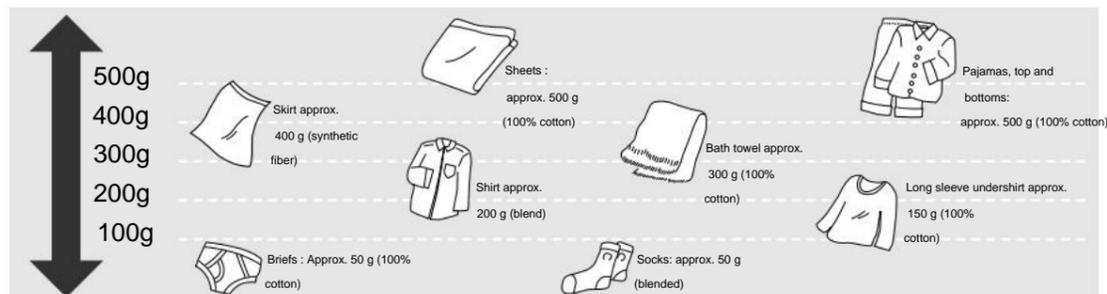

*The washing weight is based on the weight of fabrics specified by JIS (Japanese Industrial Standards). The weight may vary depending on the material.

Preparing your clothes

Leather and fur products (causes deformation)

Silk, rayon, cupra products (blends) (causes discoloration and deformation)

Waterproof sheets and clothing (may cause damage or breakdown)

Cushions, pillows, and other items that use cotton or sponges (may be damaged or cause breakdowns)

Large or thick mats with urethane or rubber backing (may be damaged or cause breakdowns)

Also... •Items other than laundry (such as disposable diapers) •Japanese clothing and Japanese clothing accessories •Items that are wrinkled or embossed •Fabrics made with tightly twisted yarn such as crepe •Items that lose their shape (jackets, ties, dresses, etc.) •Items that become frayed (fabrics such as velvet or velvet) *When washing curtains, please follow the illustrated instructions on the curtain.

Check out the clothes!

☞ Causes of breakdowns and poor drainage

- Remove metal pieces, coins, etc.
- Fasten the buttons and close the zipper

☞ Causes of vibration and poor dehydration

- Only use 3 to 4 layers of fleece material at a time.

☞ Causes of damage to clothing

- Turn items that easily become fuzzy inside out
- Use a brush to remove pet hair, hair, sand, etc.
- Tie strings etc.

How to check for color fading

Try rubbing inconspicuous areas with a white cloth soaked in undiluted liquid neutral detergent, and wash colored items separately!

Put bulky clothes and items that tend to float in first, and press down from above (to prevent clothes from flying out and water from splashing)

Bulky clothing (Water-repellent clothing, Items placed in a fine mesh net, Fleece or other 100% synthetic or blended clothing, Jumpers or other clothing with 100% synthetic outer or inner lining)

Something that floats easily on water

For the following types of clothing, after adding water, stop the machine temporarily and press lightly from above with your hand to ensure the clothing is fully saturated with water.

☞ Collar and sleeve stains...

☞ Apply detergent for collar and sleeves and wash.

☞ For mud stains...

☞ Apply detergent for spot stains or bath soap, rub and wash.

☞ Stains and dirt...

☞ Apply stain-removing detergent or oxygen-based liquid bleach and wash.

• Pre-wash with water to remove stains from blood, tea, juice, etc.

How to use a laundry net effectively

When washing, do not use delicate underwear or Only small items should be placed in the net (no other items should be placed in the net)

- Bras and stockings
- Lace clothing and lingerie


(Keep the zipper hardware in the cover.)

- Do not dry in a net (this can cause uneven drying and wrinkles)

Tips for smooth dehydration : Do not pack clothes into the net.

- Do not wash clothes only in a laundry net.

Wash your regular clothes (reservation)

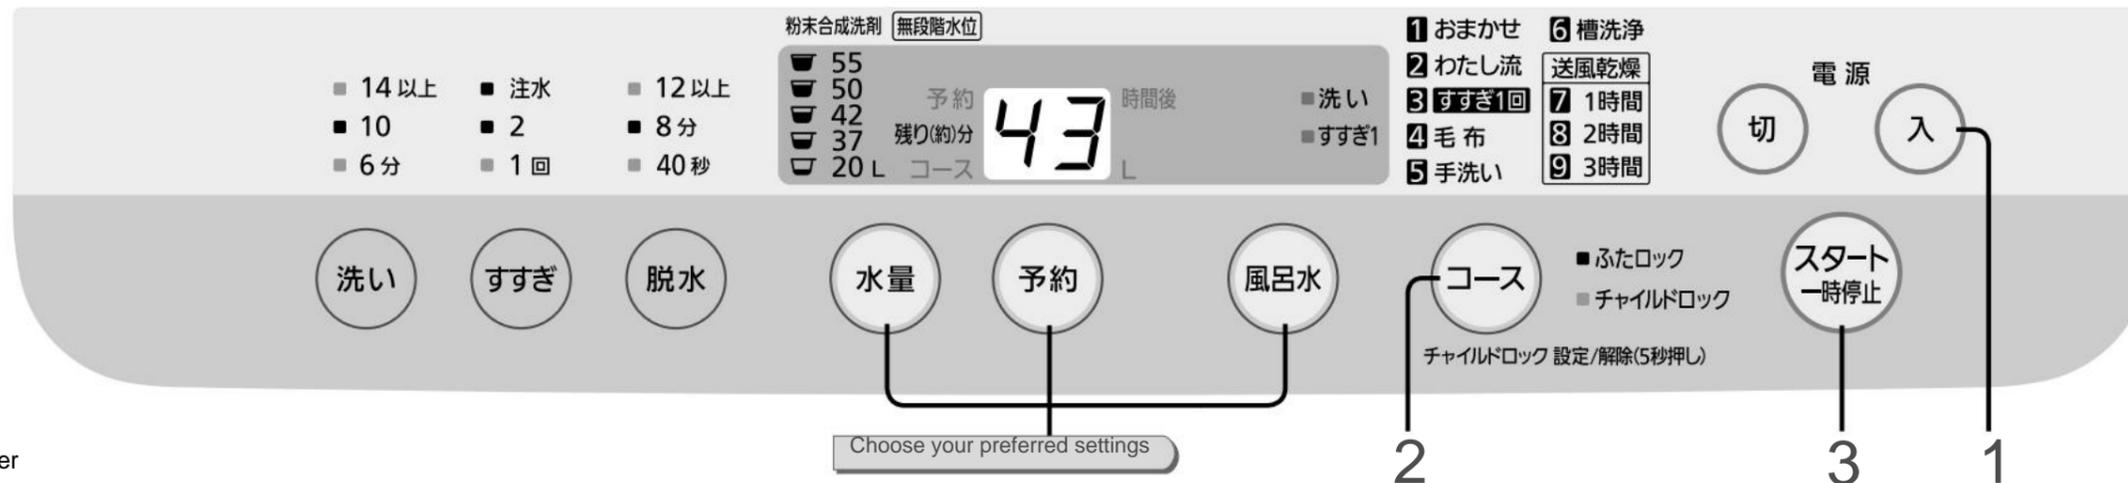

*Displayed when the "Omakase" course is selected.

•Open the water tap. Always open the water tap when using bath water.

1 **入** Put the laundry in
Turning the power on
 The "Omakase" course will be displayed.

コース
 Choose from two **courses (numbers)** to suit your laundry and stains
 (Example) In the case of the "Omakase" course

Choose your preferred settings

水量 (P.7) • You can change the time from start to end of washing.

風呂水 (P.14) • Cannot be changed after starting.

When you want to make a reservation

予約 Select the time after which the program will end (P.7)
 • Two minutes after starting, all displays except for "Reservation" will turn off.
 • To view the reservation time, press during the reservation. • To change or cancel, press again.
 • Reservation times vary depending on the course. (P.7)

• When operating during sleep, set the "Automatic" or "One Rinse" course. Setting this will reduce the sound.

3. Start

Weighing the amount of laundry "Automatic", "My Style", and "1 Rinse" courses only (The pulsator rotates for about 5 seconds)



Displays water level (for about 5 seconds)

<p>For NA-F70PB6</p> <p>予約 55 時間後</p> <p>残り約分 コース L</p> <p>Automatic setting between 32 L and 55 L</p>	<p>For NA-F60PB6</p> <p>予約 49 時間後</p> <p>残り約分 コース L</p> <p>Automatic setting between 32 L and 49 L</p>
--	--

Show remaining time

<p>For NA-F70PB6</p> <p>予約 43 時間後</p> <p>残り約分 コース L</p>	<p>For NA-F60PB6</p> <p>予約 42 時間後</p> <p>残り約分 コース L</p>
---	---

• Check the course **Display**

• Check water volume **Displayed with**

notice

• If there is water in the tub beforehand, the maximum water level may be reached without measuring the amount of laundry. • The amount of water may be more or less depending on the type of clothing, so adjust it using the water level button.

• If the clothes are above the washing/spinning tub, measure the amount of laundry and then lightly press down on them with your hand.

According to the water level display (for about 5 seconds)

4 Add detergent (P.11)


When the lid is locked, Press it to open the lid.



• Put the powdered synthetic detergent near the illustration (the detergent will dissolve more easily in the water supplied to the tank).




• When making a reservation

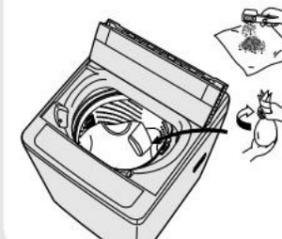

Wrap the powdered synthetic detergent in a dry towel or similar and add it to the washing machine, making sure that the detergent does not come into contact with the laundry directly.

• Liquid detergent

Add liquid detergent to the injection port

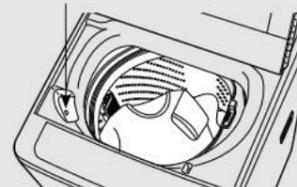

• When making a reservation, dilute any sticky liquid detergent with water before adding it.

5. Close the lid.



When the buzzer sounds, the process is complete and you can remove your clothes.

• Turn off the water tap


Note : If you

press start after closing the lid, it will take about 15 seconds for the lid to lock. (This is the time it takes to add detergent according to the display after measuring the amount of laundry.) If you open or close the lid, the lid will immediately lock and water supply will begin.

Wash with bath water

• Cannot be used on the "Hand Wash" or "Tub Clean" courses.


How to install

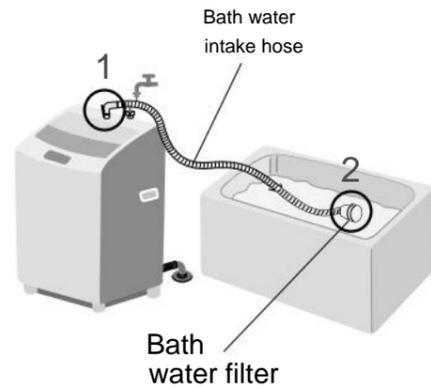

- Hose holder**
Insert the hose holder into the bath water intake port until you hear a click.
- Bath water filters**
Insert the bath water filter into the bath water suction hose while rotating it. • If the hose is short, use the extension bath water suction hose (sold separately) (back cover). • If the hose is long, cut the end on the bath water filter side.

How to tidy up

• Always remove the laundry first. (The water remaining in the bath water suction hose will flow out and wet the laundry.)

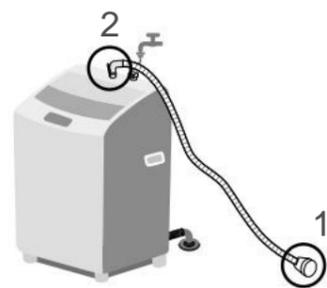

- Remove the bath water filter from the bathtub and place it somewhere where it can be drained.
- Hose holder**
While holding the hook, insert and remove the hose holder (to drain the water from the hose).
- Hose hanger** *Can be installed on either side
Attach the hose hanger to the main unit and hang the hose on it (remove it when operating to prevent noise caused by vibration).

Don't do this!


Do not use while rolled up (it cannot absorb water)

• Do not get caught in sliding doors, etc. (The hose will break)

Do not allow the water level to be higher than the main unit (overflowing).

• Do not make $\bar{y} + \bar{y}$ more than 1.4 m apart (water cannot be absorbed)

Bath water filter :
Make sure the hose does not sag. (When bath water intake begins, the hose will sag and the filter will float up.)

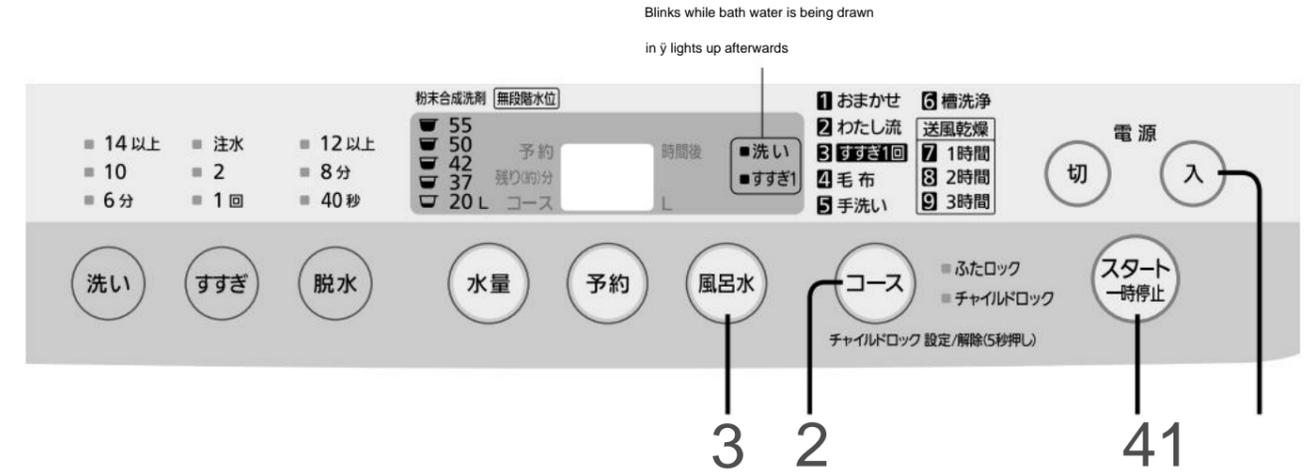

please


• When using bath water, be sure to turn on the water faucet. (This is to fill the bath pump with tap water (priming water).)

- Open the water tap
- 1 **入** Put the laundry in
- Turning the power on**
- コース**
- Select the course (number) 2** according to the laundry and dirt (P.8)
- 風呂水**
- Select**
- スタート**
- Start 5** Depending on the water level display (for about 5 seconds)

Close the lid

When the buzzer sounds, the process is finished and you can remove your clothes.

- Turn off the water tap

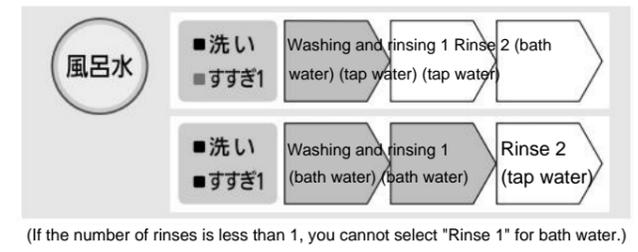

"Blanket" course for washing blankets

Use a laundry net for Meyer blankets (sold separately)

Be sure to use it

Sold separately: AXW221-8200 (back cover)

Washing without using a net may cause damage to the blanket or product.

If damage occurs due to washing without using a laundry net, it will not be covered by the warranty.

Washable blankets

 
Single size or smaller

100% synthetic fiber

•3 kg or less



- Meyer blanket
- Tufted blanket
- Woven blanket

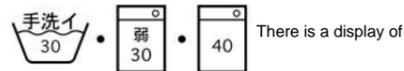


please


- Do not wash items that do not have handling instructions, waterproof sheets, covers, etc.
- Do not wash electric blankets. For washable electric blankets, follow the instructions that come with the blanket.

Preparation before washing


1 Fold the blanket and place it in the laundry net. Fold it in half.

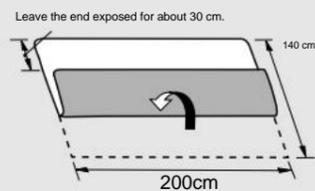


Fold it back into 6 folds (byobu fold)

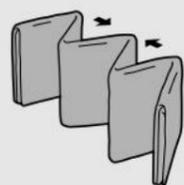

 
Fold it in half again in the same direction.

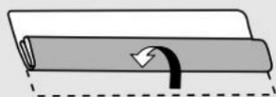

Place the edge of the laundry at the bottom of the laundry net and close the zipper.


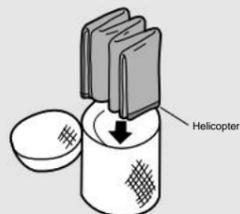


Fold it again in the same direction

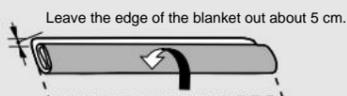 

2 Place the blanket in a laundry net into the washing/spinning tub.

Insert the zipper sideways (this makes it easier to insert). Place the zipper part on top (otherwise the laundry net may tear).

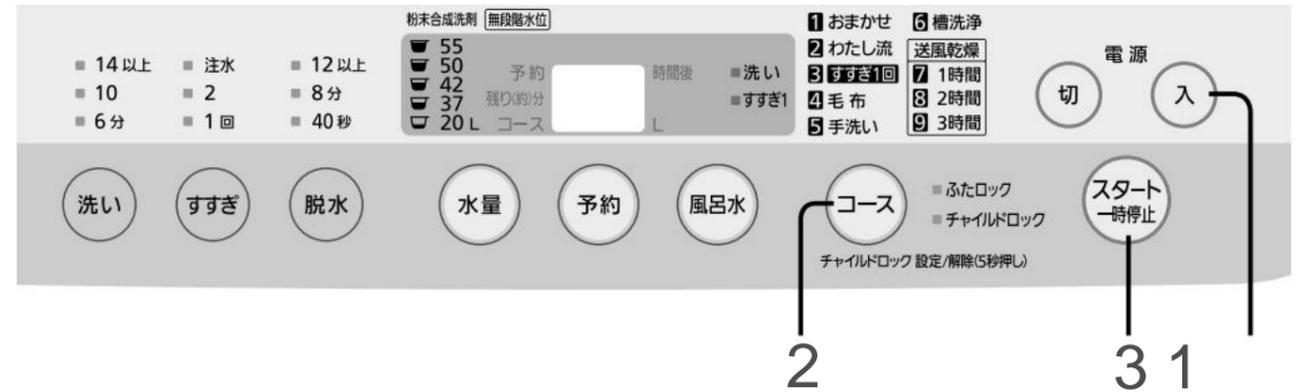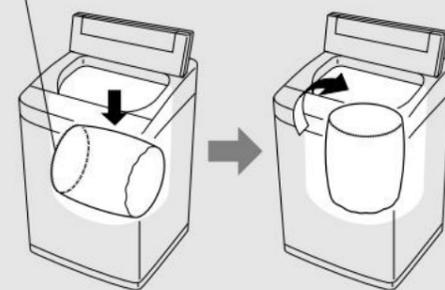

Open the water tap

Put a blanket

Turning the power on

1. Choose a blanket 2

- When using bath water (P.14)
- When using reservation (P.12)

Get started

3 4

Add liquid detergent to the liquid detergent inlet

5. Close the lid.


When the buzzer sounds, the game is over and you can remove the blanket.

- Turn off the water tap


Open the zipper



The amount of water cannot be changed. * Rinse after soaking for about 1 minute. Then rinse with water.

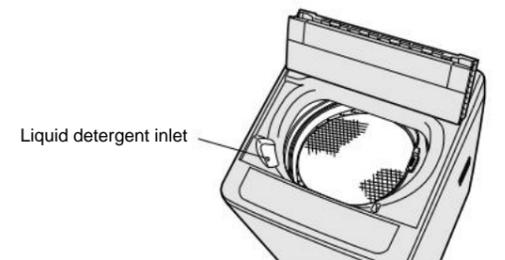

Because the blanket easily repels water, after watering, Pause the machine and then press lightly from above to thoroughly soak it in detergent solution.

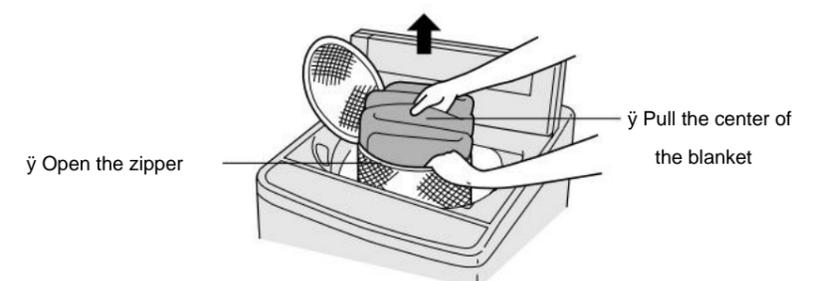

"Hand wash" cycle for washing delicate clothes

Delicate and fashionable clothes that could not be washed in a washing machine can be washed gently with water (different from dry cleaning, which uses solvents).

Items that can be washed using the "hand wash" cycle

Check the handling instructions!

  or   You can wash delicates marked with this label.

Cashmere sweaters, summer sweaters, etc.

Blouses etc.



Slacks etc.

Some items cannot be washed even if they have the above symbols. (Page 9)

please

Do not wash items that do not have care instructions, items of unknown material, or items that may fade.

Put in the

Lay the laundry flat.

(Estimated weight)

 Sweater approx. 400 g

 Blouse: Approx. 200 g

 Slacks: Approx. 400 g

Estimated capacity for washing at one time

NA-F70PB6		NA-F60PB6	
50 L	2.0 kg	47 L	1.6 kg
48 L	1.2 kg	40 L	0.4 kg
40 L	0.4 kg	40 L	0.4 kg


* If you are concerned about damage to your clothes, place them in a commercially available laundry net. * Do not wash dark and light colored items together. * Turn items that tend to collect lint inside out.


please

- To remove grease, dust, and mud stains from collars, sleeves, etc. Apply a detergent that does not contain fluorescent agents and gently dab with a soft-bristled brush to remove dirt.
- Pretreat the following clothing items:
 -  The pleats are fastened with thread.
 -  Dark colored buttons should be wrapped in plastic wrap.
- Do not use any detergent other than the following detergents. (This may cause the detergent to remain undissolved or damage to clothes.) * Be sure to add detergent to the liquid detergent inlet.
 -  Liquid neutral detergent for delicates (for wool and silk)
 - Recommended detergent "Centrifugal Force 21" sold separately

Some detergents create too much foam and are difficult to rinse. Do not use bleach. Use tap water (below 30°C).

(Do not use hot water or leftover bath water.) If it shrinks (P.36)

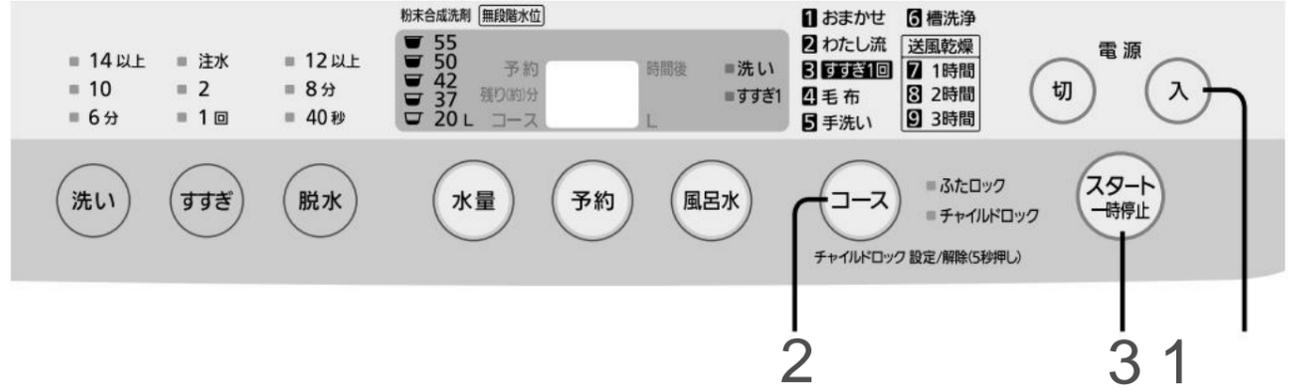

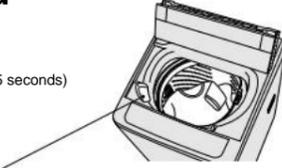- Open the water tap
- Turning the power on  "Bath water" and "reservation" cannot be used.
- Choose "Hand wash"  
- Get started  According to the water level display (for about 5 seconds)
- Liquid neutral detergent 4  Put detergent into the liquid detergent inlet. Check water volume.  Displayed with
- Close the lid  When the buzzer sounds, remove the clothes immediately (leaving them will cause wrinkles and discoloration).

If necessary, press to select the amount of water. (See "Estimated capacity for one wash" on page 18.)


For information on adding fabric softener (page 10), if sweaters or other items start to float up, pause the machine after adding water and press down lightly from above.

Turn off the water tap


Tips for drying

Wrinkle-prone shirts, blouses, slacks, etc.  Hanger drying


Wrap the towel around your shoulders  (Do not hang-dry knitted products!)

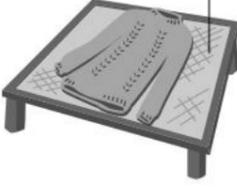For loosely woven knits, etc.  Please use a flat drying net or a non-wooden bathtub lid.

Knitted products, etc.  Hanging to dry

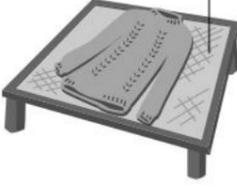For even better results... Light-colored or white items, wool, and nylon  Dry in the shade. Knitwear and new synthetic fibers  Gently pat with the palm of your hand to remove wrinkles, straighten the shape, and hang to dry.

Create your own course with this "My Style" course

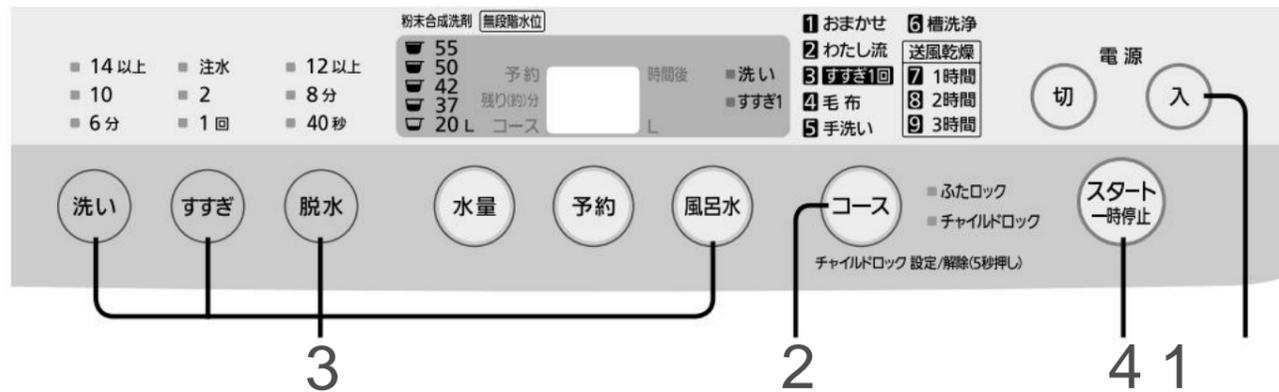

You can set your preferred driving style. The next time you select the "My Style" course, the previously set content will be displayed. made: Wash time, number of rinses, spin time, bath water . * Water volume is not stored.

- Open the water tap
- Put the laundry in
- Turning the power on**
- 1 2 **Choose your own way**
- 3 **Select the operation mode.**
When using bath water (P.14) •
When using reservation (P.12)
- 4. **Start**
- 5 Add detergent according to the water level display (for about 5 seconds) (P.11)
- 6 **Close the lid**
- When the buzzer sounds, the process is complete and you can remove your clothes.
- Turn off the water tap

Wash/rinse/spin

Separate washing (Example) When washing only is set to "14 minutes"



You can combine the washing time, number of rinses, and spin time, or run only the "spin" function. (It does not remember.) • For individual operation of each course, select the course, **Please switch.**

- Open the water tap
- Put the laundry in
- Turning the power on**
- 1 2 **Choose to wash, rinse and spin**
- For your purpose
- When using bath water (P.14) •
When using reservation (P.12)
- 3. **Get started**
- When the buzzer sounds, the process is complete and you can remove your clothes.
- Turn off the water tap
- notice**
- Only "dehydration" starts with drainage, so
The spin-dry time display and the remaining time display are different.

It is useful in the following situations:
Alone or in combination...

- ÿ Fill the washing and spin tubs with water, and use the detergent twice (g. 34) (Laundry liquid remains)
- ÿ Reuse the rinse solution
- ÿ Wash separately
- ÿ Rinse the washed items
- ÿ Rinse and spin-dry the washed items.
- ÿ Dehydrate the washed items.
Drain the water from the washing and spin tubs

• When starting from "rinse" or "spin"
If there is water in the washing/spinning tub, the cycle will start with draining. If there is no water in the tub, the cycle will start with spinning. Dry clothes may fly out and come into contact with the machine, causing damage. Make sure the clothes are laid flat.